


M200/M300 mini-ITX Enclosure

Mini-ITX Embedded Enclosure

Hard Drive Installation Guide

When a PCI card does not allow the installation of a hard drive in the standard places

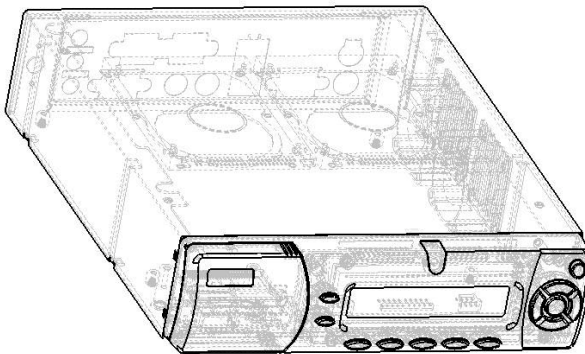

Before you start...

Please take a moment and read this manual before you start assembling this enclosure. Often times, rushing into unit installation can result in damage to your enclosure, motherboard, power supply


Warning:

The M-200/ M300 has been designed for embedded installations and it has a limited assembly / disassembly cycles.

Close the top lid only when done with your installation. Damage to the side clips might occur if enclosure is not properly serviced.

How to:

There are some certain types of PCI card(installed on the PCI riser) that don't allow you to install any hard drive. For that, you will have to replace a hard drive. By looking at this image below, you will see where it can be positioned:

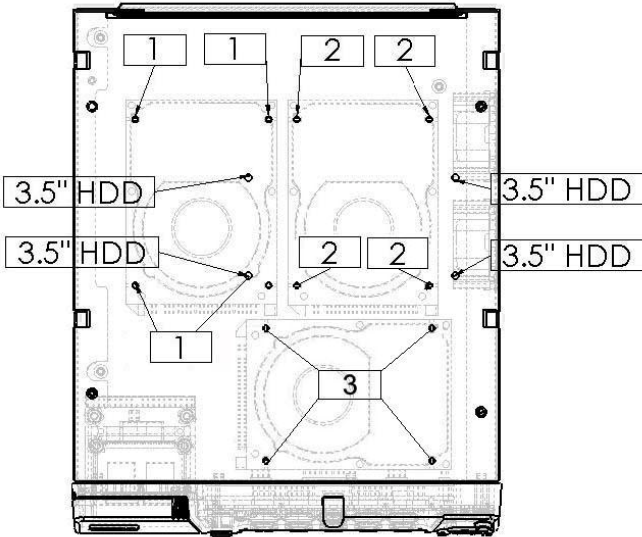

For 2.5" drives, please use the holes marked with "1" and "2" respectively.
For 3.5" drives, please use the holes marked with "3.5" HDD".
For replacing a 2.5" drive, please use the holes marked with "3".

You have to drill 4 holes in order to reposition the hard drive.
Please see the drawing below:

